

# Brasserie S

# Bistro S

# Tradition S

114092-02  
2019-12



- **N Innregulering**
- **S Injustering**
- **SF Poistoilman säätö**
- **E Initial adjustment**



## Innregulering

### Grunnventilasjon

Grunnventilasjonen stilles inn ved at skyvespjeldet A settes i ønsket stilling som vist på markering B, Fig. 26.


### Trykkfallsmåling

Trykket måles ved at slangen monteres på måleuttaket i spjeldets fremkant, Fig. 27.

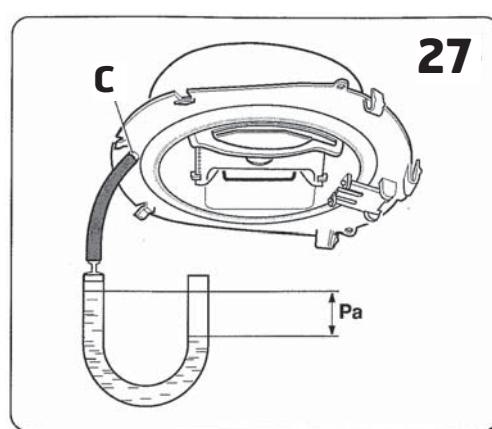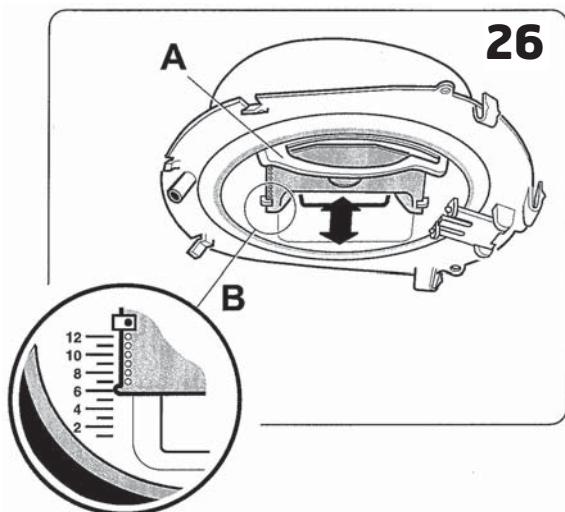

## Reguleringskurver

GRUNNVENTILASJON/FORSERET VENTILASJON  
Tilpasningsdiagram

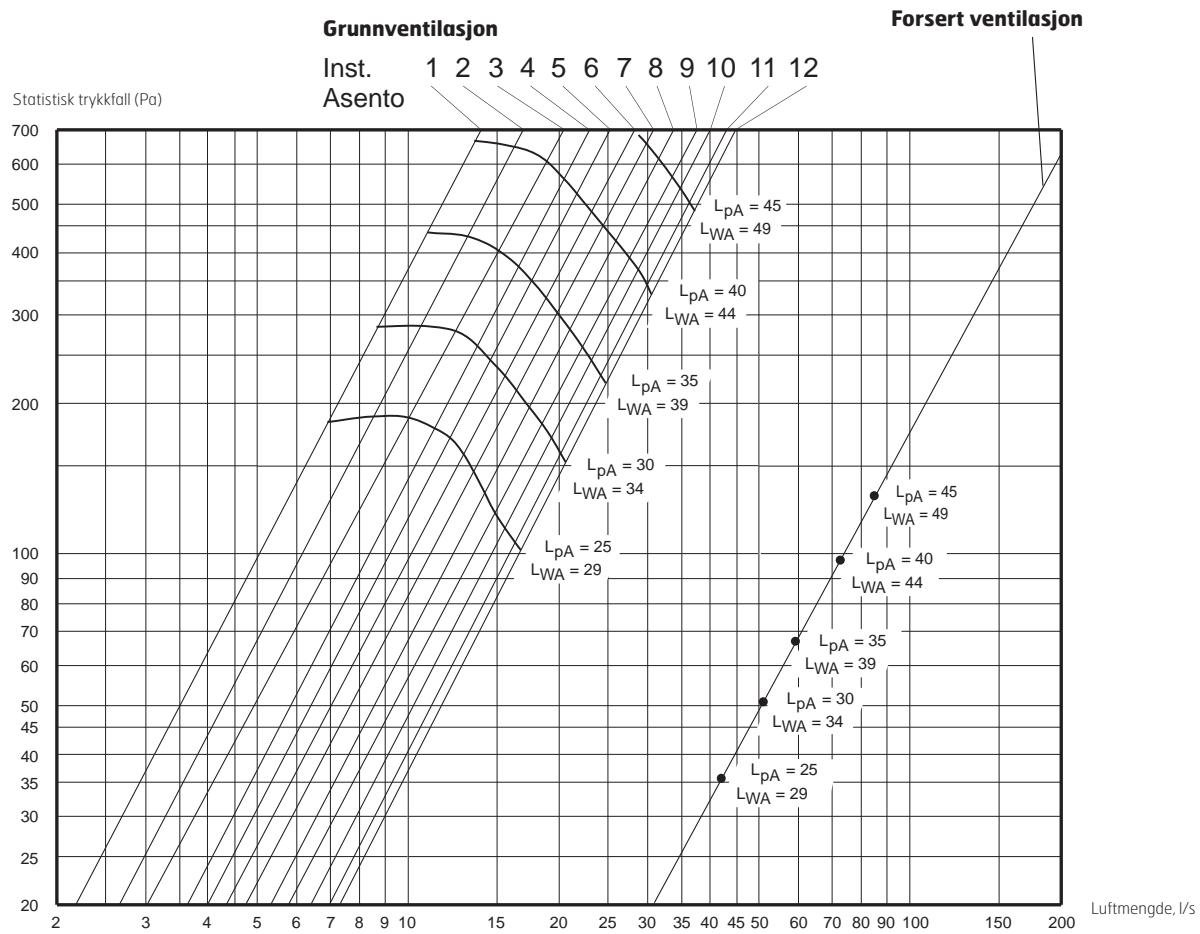



## Injustering

### Grundventilation

Grundventilationen ställs in genom att skjutspjället A sätts i önskat läge som visas på markeringen B, fig. 26.

### Tryckfallsmätning


Trycket mäts genom att slangens monteras på mätuttaget i spjällets framkant, fig. 27.

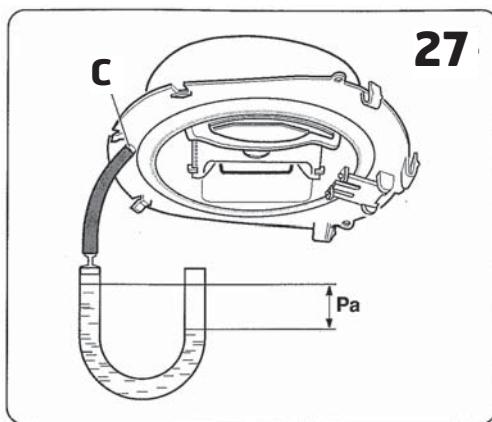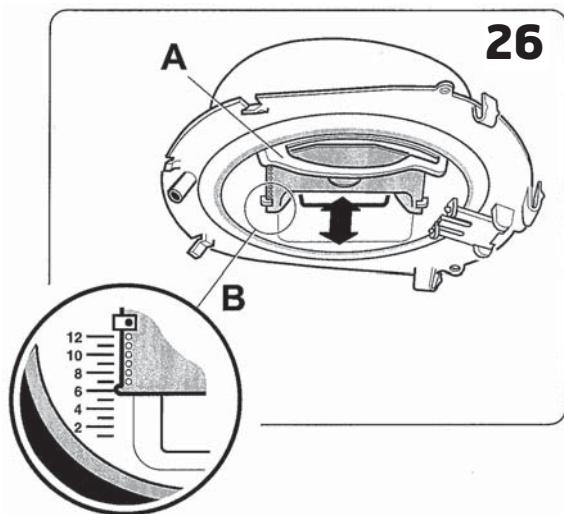

## Justeringskurvor

GRUNDFLÖDE/FORCERINGSFLÖDE

Injusteringsdiagram

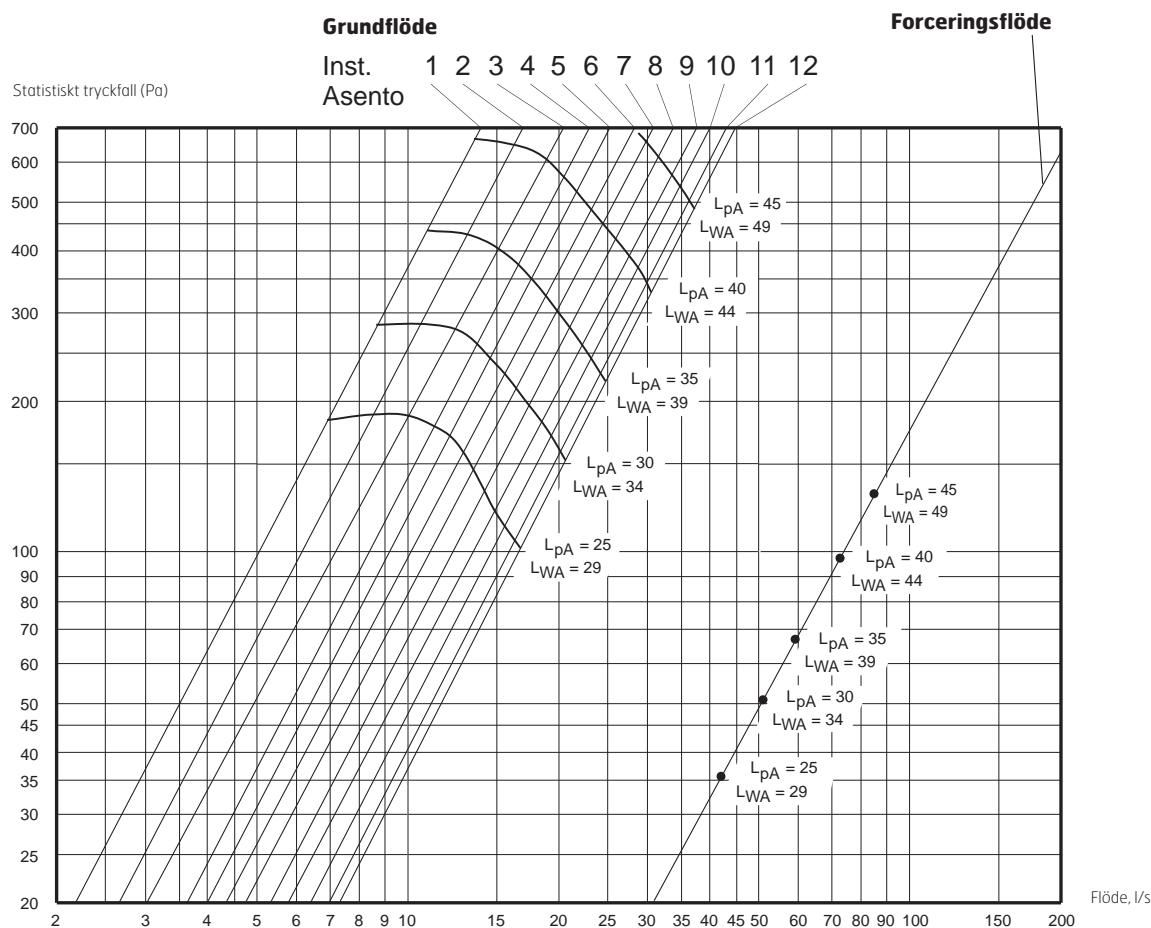



## Säätäminen

### Perusvirtaus

Perusvirtaus säädetään asettamalla liukuosa A haluttuun asentoon merkintöjen B mukaisesti kuten esitetyt kuvassa 26.


### Paine-eromittaus

Asenna letku kauluksen etuosassa olevaan mittauspisteeseen, ks. kuva 27.

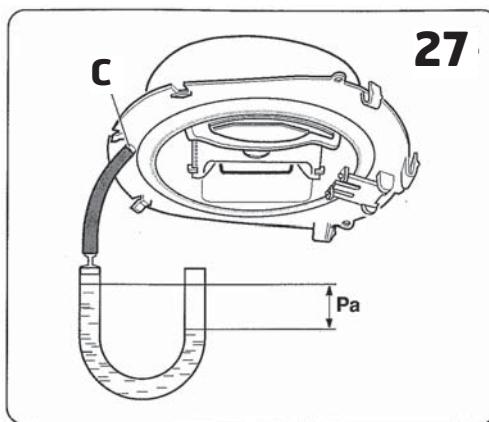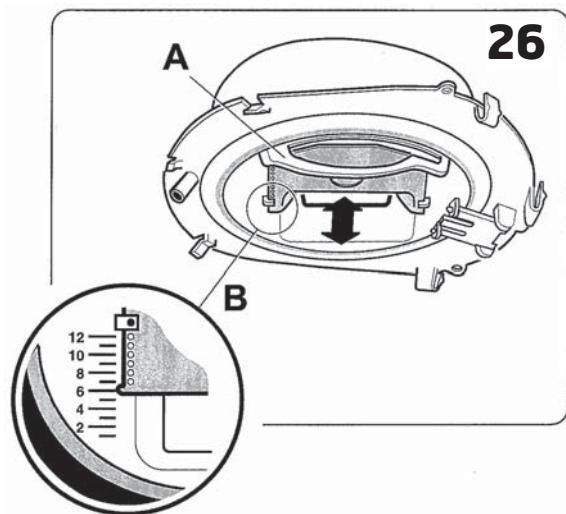

## Säätökäyrät

PERUSTUULETUS/TEHOSTETTU TUULETUS  
Säätökaavio

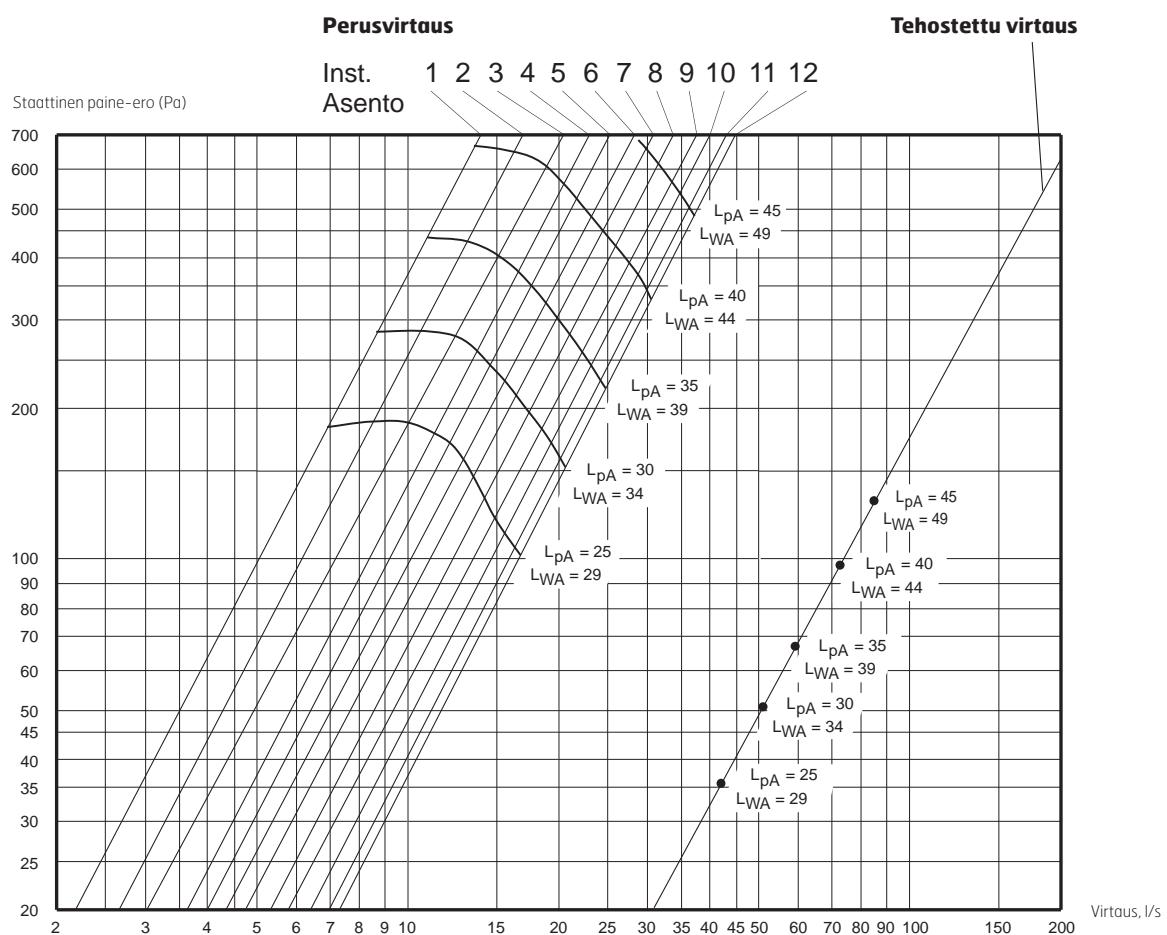



## Initial adjustment

### Basic ventilation

Basic ventilation is adjusted by setting the sliding damper A to the desired position as shown at point B, Fig. 26.

### Pressure drop measurement


The pressure is measured by fitting the hose to the measuring outlet at the front of the damper, Fig. 27.

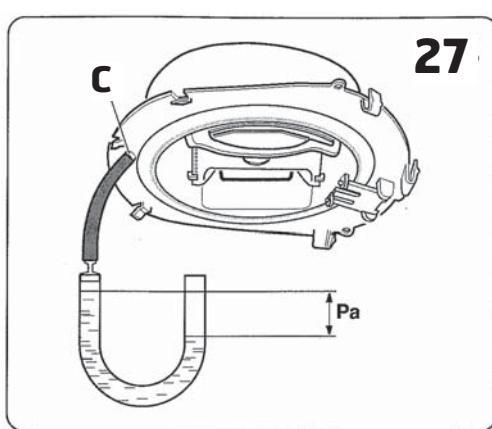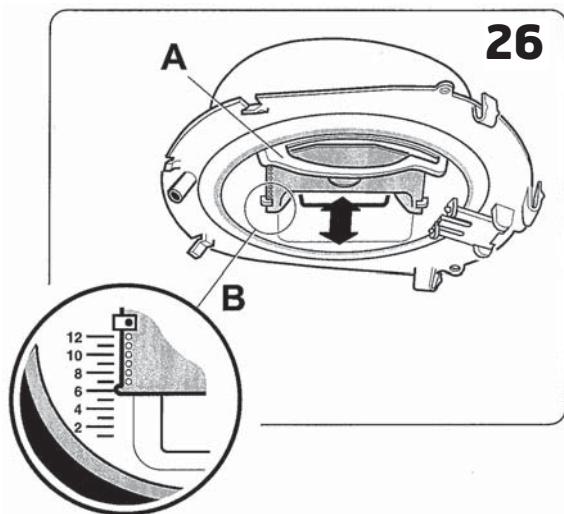

## Adjustment curves

BASIC VENTILATION/ FORCED VENTILATION

Adjustment diagram

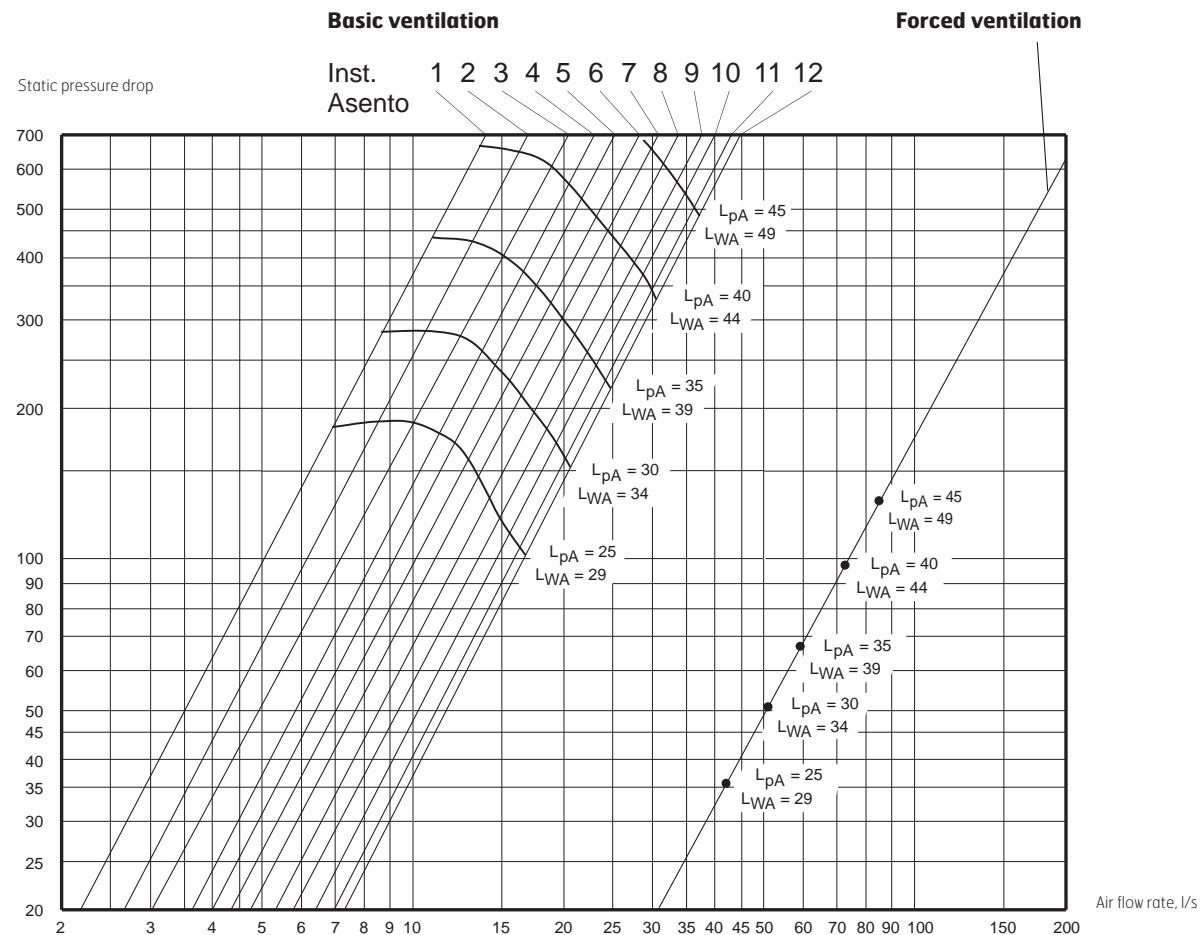



Flexit AS, Televeien 15, N-1870 Ørje [www.flexit.no](http://www.flexit.no)